

Dip switch 1: ☀

When turned to SUN mode (down) it will work day & night, when turned to MOON mode (up) it will only work when the ambient light is less than 10 lux

Dip switch 2: △

In up position sensor will work with detection range of 3m & in down position sensor will work with detection range of 6m

Dip switch 3 - 8:

To select time delay, move the desired dip switch upwards to activate it, time delay options are 5s, 30s, 1min, 3min, 5min, 8min.

In case of multiple selection it will consider the minimum time selected

